



EuroBus PatchBook

mLab.midisoft.de 201023
 Rolf Meurer
 Worringer Str.9
 D-40211 Düsseldorf

T1 CV1 IN
 T2 MOD IN
 T3 Audio OUT
 AUX Sync IN

EuroBus default routing:

#	Name	Source	Destination
1	CV 1	note (V/Oct)	VCO1 *T
2	Audio 5	VCOs/Noise...	VCF or Mixer
3	Audio 6	VCOs/Noise...	VCF or Mixer
4	Audio 7	VCOs/Noise...	VCF or Mixer
5	Gate	GATE	all ENV
6	Sync	VCO 1	other VCOs
7	Env 1	Filter ADSR	all VCF control
8	Env 2	Loudness ADSR	all VCA control
9	Mod	LFO	all MOD Inputs
10	CV Link	VCO1 T	other VCOs *T
11	Audio 1	VCOs/Noise...	VCF or Mixer
12	Audio 2	VCOs/Noise...	VCF or Mixer
13	Audio 3	VCOs/Noise...	VCF or Mixer
14	Audio 4	VCOs/Noise...	VCF or Mixer
CV 2	cc74 Filter Freq.		ENV 1 Amount
CV 3	cc07 Loudness		ENV 2 Amount
CV 4	cc01 Modulation		LFO Amount

MODULE: Oberheim SEM-VCO