



EuroBus PatchBook

mLab.midisoft.de 201023
 Rolf Meurer
 Worringer Str.9
 D-40211 Düsseldorf

T1	I/O 6 (P5)
T2	I/O 7 (OUT L)
T3	I/O 8 (OUT R)
B2	I/O 1 (P1)
B3	I/O 2 (P2)
B4	I/O 3 (P3)
B13	I/O 5 (P4/2)
B14	I/O 4 (P4/1)

EuroBus default routing:

#	Name	Source	Destination
1	CV 1	note (V/Oct)	VCO1 *T
2	Audio 5	VCOs/Noise...	VCF or Mixer
3	Audio 6	VCOs/Noise...	VCF or Mixer
4	Audio 7	VCOs/Noise...	VCF or Mixer
5	Gate	GATE	all ENV
6	Sync	VCO 1	other VCOs
7	Env 1	Filter ADSR	all VCF control
8	Env 2	Loudness ADSR	all VCA control
9	Mod	LFO	all MOD Inputs
10	CV Link	VCO1 T	other VCOs *T
11	Audio 1	VCOs/Noise...	VCF or Mixer
12	Audio 2	VCOs/Noise...	VCF or Mixer
13	Audio 3	VCOs/Noise...	VCF or Mixer
14	Audio 4	VCOs/Noise...	VCF or Mixer
CV 2	cc74 Filter Freq.		ENV 1 Amount
CV 3	cc07 Loudness		ENV 2 Amount
CV 4	cc01 Modulation		LFO Amount

MODULE: MIXER